



Einsatzgrenzen
Application limits
Limites d'application
Limiti d'applicazione
Limites de aplicación

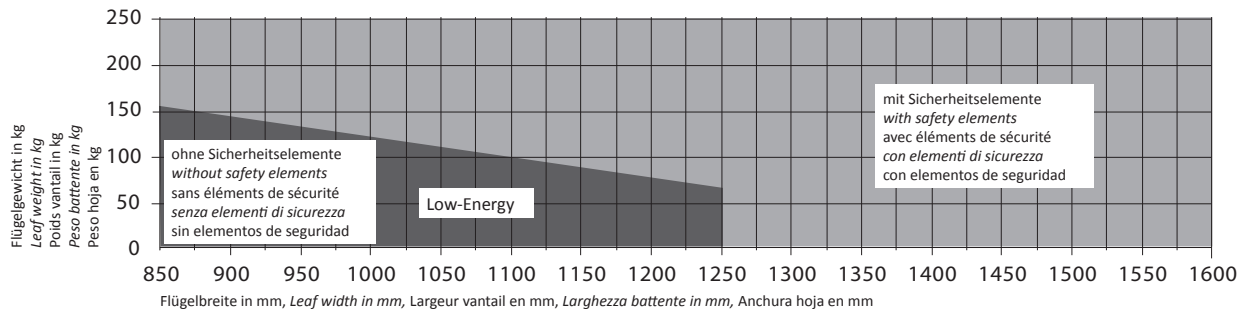


Maximale Windlasten
Maximum wind-load capacity
Charges de vent maximales
Massime resistenze al vento
Niveles máximos de viento


Normalgestänge drückend (Sturzmontage)
 Normal rods pushing function (lintel mounting)
 Tringlerie normale fonction de poussée (montage contre linteau)
 Braccio normale funzione di pressione (montaggio architrave)
 Brazo normal función de presión (montaje dintel)

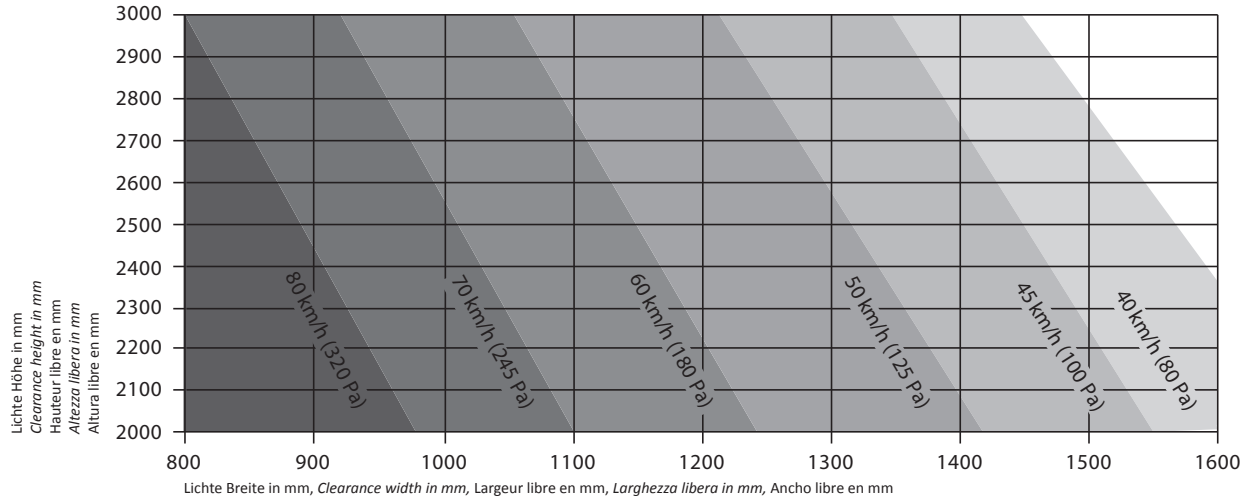

Gleitgestänge drückend (Sturzmontage)
 Sliding rods pushing function (lintel mounting)
 Tringlerie de glissement fonction de poussée (montage contre linteau)
 Braccio a pattino funzione di pressione (montaggio architrave)
 Brazo deslizante función de presión (montaje dintel)

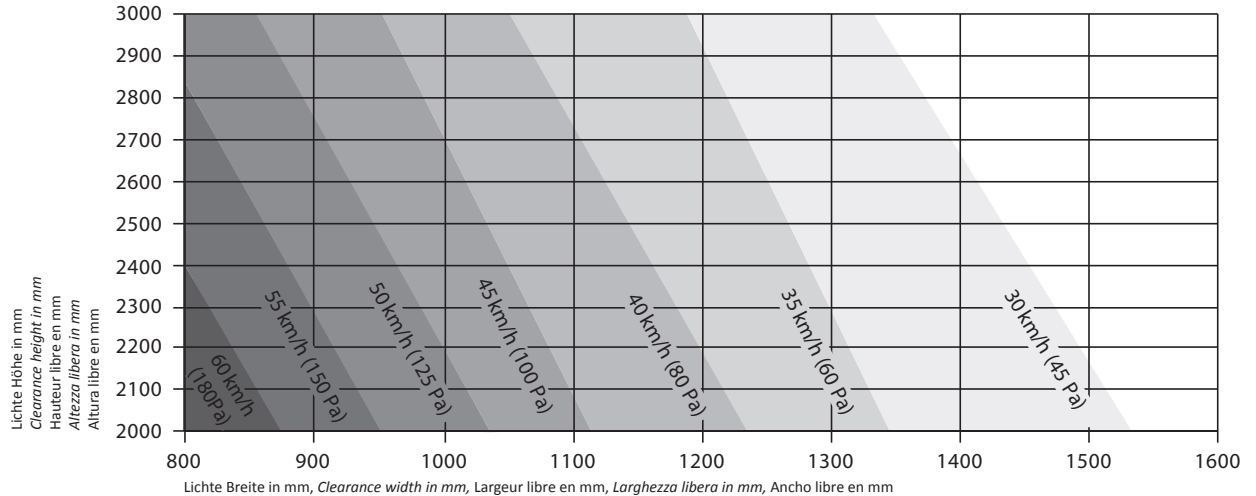

Gleitgestänge ziehend (Sturzmontage)
Sliding rods pulling function (lintel mounting)
 Tringlerie de glissement fonction de traction (montage contre linteau)
 Braccio a pattino funzione di trazione (montaggio architrave)
 Brazo deslizante función de tracción (montaje dintel)

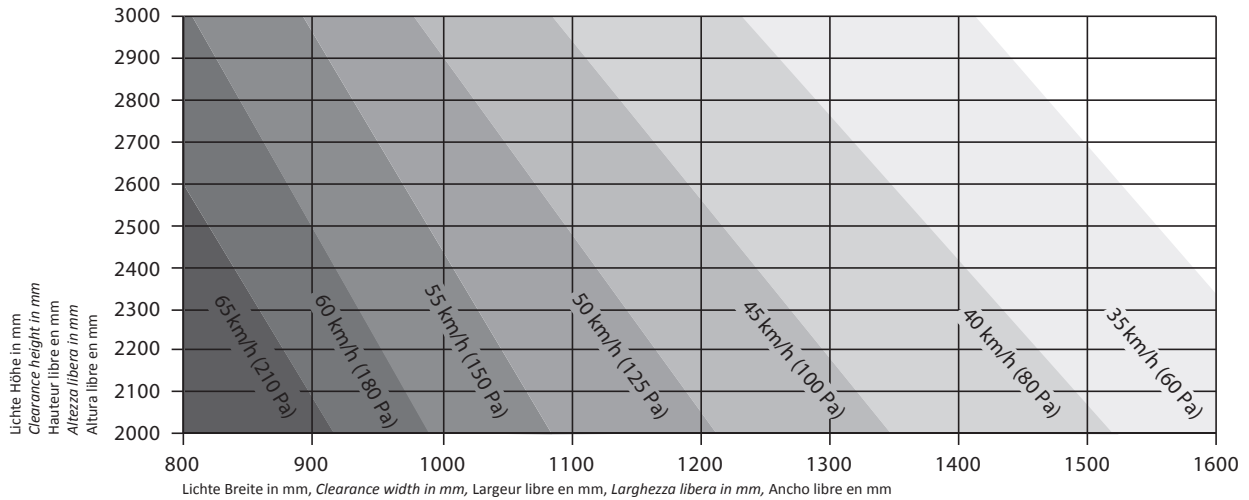

Gleitgestänge drückend (Flügelmontage)
Sliding rods pushing function (leaf mounting)
 Tringlerie de glissement fonction de poussée (montage contre battant)
 Braccio a pattino funzione di pressione (montaggio battente)
 Brazo deslizante función de presión (montaje batiente)

